

Configure QCAM IP3M952E for ZoneMinder - RTSP

Ok so I couldn't find any program to find the IP, I had to use my router's ip distribution list and guess... but once you get there use firefox to login.

```
Default PWD 12345
```

```
rtsp://admin:[PassWD]@[IP]:554/h264Preview_01_main
```